

Instrument Instruction

No.	project	Function parameter								
1.	Operating Voltage	DC12V								
2.	Speedometer	22.8Hz corresponds to 63km/h.								
3.	Tachometer	166 Hz to 10 x 1000 r/min.								
4.	Fuel gauge	Liquid crystal display, E point 98Ω, F point 8Ω.								
5.	Key Function	<p>A. In the total state, press and hold for 3 seconds to switch between metric and imperial.</p> <p>B. In the subtotal state, press and hold for 3 seconds and subtotal is cleared.</p>								
6.	<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <tr> <td>端子</td> <td>DJ621-E2. 8*0. 5</td> </tr> <tr> <td>塑料件</td> <td>DJ7091A-2. 8-21</td> </tr> </table>	端子	DJ621-E2. 8*0. 5	塑料件	DJ7091A-2. 8-21	<p>Light blue: turn right, 12V is controlled, light green</p> <p>Blue: High beam, 12V, blue</p> <p>Brown: profile, 12V is controlled, light green</p> <p>Orange: turn left, 12V is controlled, light green</p> <p>Yellow and black: RPM</p> <p>Green: negative</p> <p>Blue and white: fuel</p> <p>Red: Battery(Hold time, connect to battery positive)</p> <p>Black: switch</p>				
端子	DJ621-E2. 8*0. 5									
塑料件	DJ7091A-2. 8-21									
7.	<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <tr> <td>端子</td> <td>DJ621-E2. 8*0. 5</td> </tr> <tr> <td>塑料件</td> <td>DJ7061A-2. 8-21</td> </tr> </table> <table border="1" style="margin: 10px auto; border-collapse: collapse;"> <tr> <td>端子</td> <td>DJ621-E2. 8*0. 5</td> </tr> <tr> <td>塑料件</td> <td>DJ7021A-2. 8-21</td> </tr> </table>	端子	DJ621-E2. 8*0. 5	塑料件	DJ7061A-2. 8-21	端子	DJ621-E2. 8*0. 5	塑料件	DJ7021A-2. 8-21	<p>Green/Red: N GEAR</p> <p>Pink: 1 GEAR</p> <p>Blue/Red: 2 GEAR</p> <p>Green/Black: 3 GEAR</p> <p>Yellow/Red: 4 GEAR</p> <p>Yellow / white: 5 GEAR</p> <p>Green blue: 6 GEAR</p>
端子	DJ621-E2. 8*0. 5									
塑料件	DJ7061A-2. 8-21									
端子	DJ621-E2. 8*0. 5									
塑料件	DJ7021A-2. 8-21									
8.	<table border="1" style="margin: 10px auto; border-collapse: collapse;"> <tr> <td>端子</td> <td>DJ621-E2. 8*0. 5</td> </tr> <tr> <td>塑料件</td> <td>DJ7031A-2. 8-21</td> </tr> </table>	端子	DJ621-E2. 8*0. 5	塑料件	DJ7031A-2. 8-21	<p>Red and white: sensor positive</p> <p>Green: sensor negative</p> <p>Black/White: Sensor Signal</p>				
端子	DJ621-E2. 8*0. 5									
塑料件	DJ7031A-2. 8-21									

MLS002 Spring Breeze Rear Door Setup

Hold the button first, then open the electric door lock, and enter the rear door setting for 5 seconds. It is divided into 5 interfaces.

Interface 1: Tire circumference setting

The speed of the display 188 second 8 words display 1, the total cumulative display C-1871, 1871 that the default tire circumference is 1871mm, thousands of bits flash, short press to start changing the current digit, no action is a hundred flash, cycle to One bit. The perimeter can be set from 500-2600mm. Press and hold the button for 3 seconds to save to the setting interface of the number of magnets.

Interface 2: Magnetic Number Setting

The 188 second 8 characters display in the speed display 2, the total cumulative display C---02, 02 represents the number of magnets, 1-12 can be set, short press modify. Long press 3s to save the speed setting interface.

Interface 3: Speed Setting Interface

The 188 2nd 8 word display of the speed display shows 3, the total accumulative display C----2, 2 indicates that the engine is 2 cylinders. Short press to switch 2 cylinders/4 cylinders. Press and hold for 3 seconds to save the two-line, three-line fuel setting interface.

Interface 4: Two-wire, three-wire fuel setting Speed

display 188 second 8 words display 4, the total cumulative display E --- 3,3 said three-line oil gauge, set to 3-line display E --- 3, set to 2-line display E---- 2, short press to switch 3 lines / 2 lines. Press and hold for 3s to enter the accumulated clear interface.

Interface 5: Accumulated Clear

The speed of the display 188 second 8 words display 5, short press the button to clear, clear 200km once, can be cleared three times (into the back door to set clear once)

Long press or power off to exit the rear door setting.

The instrument is a precision device. If you don't know how to install or encounter any problems, please contact customer service first. Customer service will help you solve the problem. Please don't open the dispute in a hurry.

Thank you for your understanding.