


OWNER'S MANUAL


106-00100-02 ECC

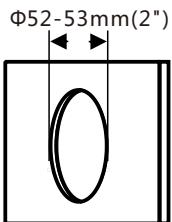

A

如A图，在准备安装仪表面板上开孔Φ52~53mm，并保证面板后面有至少65mm的空间。


Pic A : Before installation , firstly ,to open a hole (Dia:52~53mm) of the panel, make sure there is a space with (65mm backyard of panel) as well

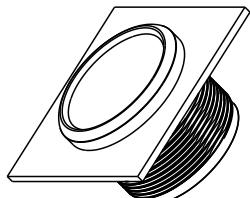

B

如B图，将仪表放入开好孔的仪表面板中


PicB: Put the gauge in the hole

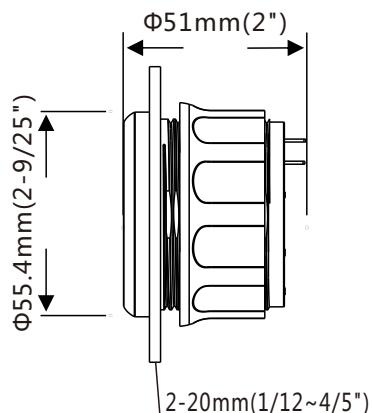

D

如D图，关于外形尺寸的标注说明


Pic D: Size and annotations

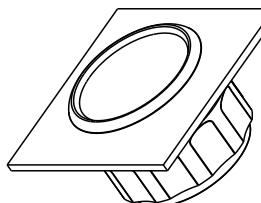

C

如C图，将仪表调整好位置后用仪表后盖将仪表锁紧在仪表面板上

Pic C: Mount the guage in hole, twist the back cover on after adjustment.

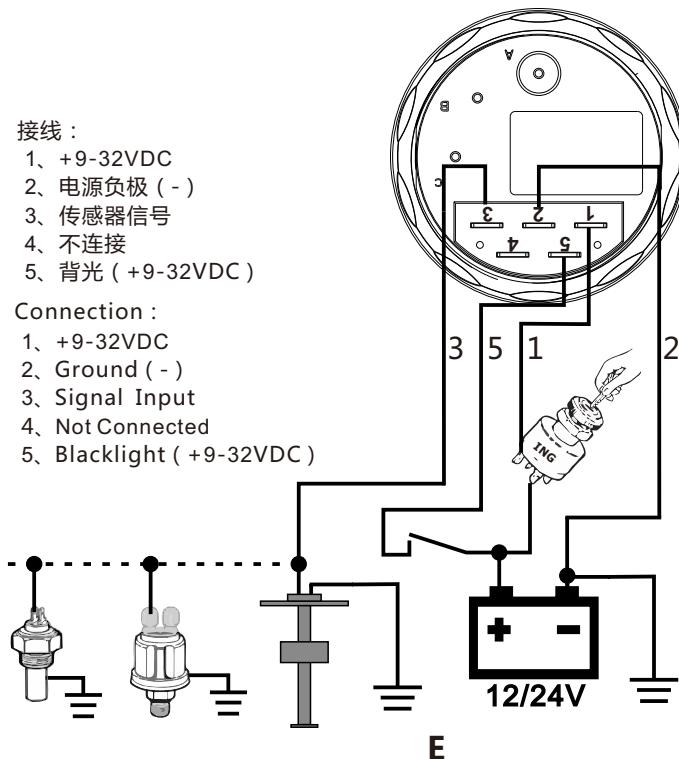

E

参考E图连接电线，如果是电压表和小时计，则没有4号端子(插片尺寸：6.3X0.8mm)。

Pic E(Wires Connecting) : Generally, No No.4 terminal for volt meter and hour meter
(Terminal size:6.3x0.8mm)

技术参数：

工作电压：9~32VDC ,

工作电流： $\leq 50\text{mA}$;

工作温度： $-30\sim +75^\circ\text{C}$

存储温度： $-40\sim +85^\circ\text{C}$ 。

Specification :

Operating Voltage : 9~32VDC ,

Operating current : $\leq 60\text{mA}$;

Operating temperature : $-30\sim +75^\circ\text{C}$

Storage temperature : $-40\sim +85^\circ\text{C}$ 。