



# OWNER'S MANUAL

106-00101-01 ECC

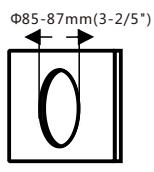

如A图，在准备安装仪表面板上开孔Φ85~87mm，并保证面板后面有至少65mm的空间。

Pic A : Before installation , firstly ,to open a hole (Dia:85~87mm) of the panel, make sure there is a space with (70mm backyard of panel) as well

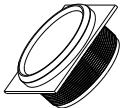

如B图，将仪表放入开好孔的仪表面板中  
PicB: Put the gauge in the hole



如C图，将仪表调整好位置后用仪表后盖将仪表锁紧在仪表面板上

Pic C: Mount the guage in hole, twist the back cover on after adjustment.

C

速比调整：

1)按住仪表黑色橡胶按键3秒，进入速比设置模式，如果松开按键3秒，退出速比设置模式，并自动保存所设置的数据。

2)进入设置模式后,按住按键数值一直增加,松开按键,再按住按键,数字一直递减;速比调整范围:

1-300, 调整到您想要的速比值,松开按键3秒,数字自动保存,1-12速比之间,步进值0.1,12-300速比之间,步进值0.5.

3)如果您的传感器安装在飞轮盘上,速比值等于发动机齿轮数;如果转速信号取自W点信号,速比值等于电极数的一半(Poles/2)

典型速比设置参考：

舷外机	
电极数	速比
4	2
6	3
8	4
10	5
12	6

舷内机或汽油机		
气缸数	冲程	速比
4	4	2
6	4	3
8	4	4
10	4	5
12	4	6

柴油发动机	
飞轮齿数	速比
速比=发动机飞轮齿数	

H - 0096

表示设置速比=96

Speed ratio adjustment:

- 1)Press the black rubber button on the instrument for 3 seconds, then it will enter into the speed ratio setup mode, if the button is released for 3 seconds, it will exit the speed ratio setup mode, and automatically retain the setting data.
- 2)After entering the setup mode, press the button, the value will be increasing, and release the button, then press it again, the number will be decreasing; the adjustment range of speed ratio : 1-300, The stepping value is 0.1 for the range 1-12 and 0.5 for range 12-300. Adjust the ratio value to what you want, then release the button for 3 seconds, the digital automatic will automatically save.
- 3)If your transmitter is installed on the flywheel, the ratio value is equal to the number of the engine gear; if the speed signals come from w point signal, the ratio value is equal to half electrodeplate (Poles/2). If it is the gasoline engine, the speed ratio is equal to the number of cylinders (cylinder/2).

Typical ratio setting reference:

Outboard	
poles	speed ratio
4	2
6	3
8	4
10	5
12	6

Intboard or Gas engine	
cylinder	cycle
4	4
6	4
8	4
10	4
12	4

Diesel engine	
Gear number	speed ratio
speed ratio=Gear number	

H - 0096

The set speed ratio=96

技术参数：

工作电压：9~32VDC ,

工作电流： $\leq 60\text{mA}$ ;

工作温度： $-30 \sim +75^\circ\text{C}$

存储温度： $-40 \sim +85^\circ\text{C}$ 。


Specification :

Operating Voltage : 9~32VDC ,


Operating current :  $\leq 60\text{mA}$ ;

Operating temperature :  $-30 \sim +75^\circ\text{C}$

Storage temperature :  $-40 \sim +85^\circ\text{C}$ 。

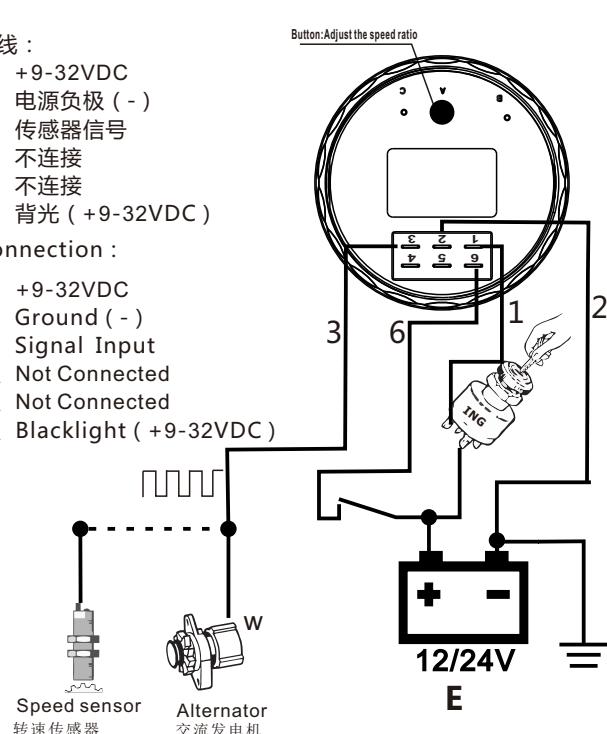

接线图(插片尺寸：6.3X0.8mm).  
Wires Connecting(Terminal size:6.3x0.8mm )

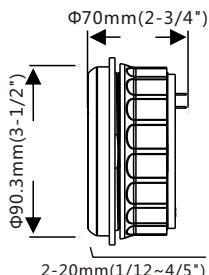

如D图，关于外形尺寸的标注说明

Pic D: Size and annotations

B

C