


OWNER'S MANUAL


106-00001-01 ECP

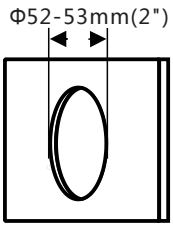

A

如A图, 在准备安装仪表面板上开孔Φ52~53mm, 并保证面板后面有至少70mm的空间。


Pic A : Before installation , firstly ,to open a hole (Dia:52~53mm) of the panel, make sure there is a space with (70mm backyard of panel) as well

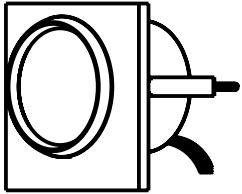

B

如B图, 将仪表放入开好孔的仪表面板上


PicB: Put the gauge in the hole

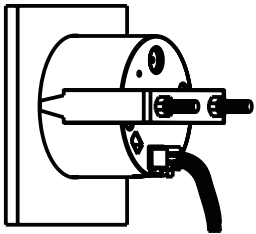

C

如C图, 用M4螺母和C型固定扣将仪表锁紧在仪表面板上

Pic C: Using M4 nut and C type bracket to seal up the gauge

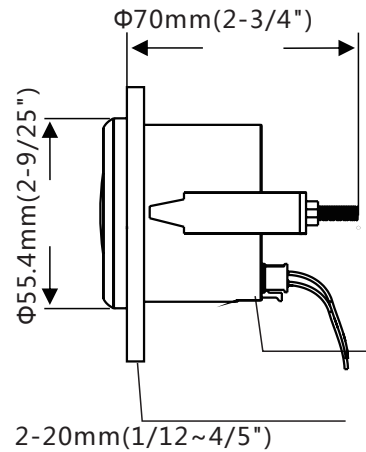

D


如D图, 关于外形尺寸的标注说明
Pic D: Size and annotations

接线:

- 1、红色线--+9-32VDC
- 2、黑色线-- 传感器信号(RS+)
- 3、橙色线--背光(+9-32VDC)
- 4、蓝色线--电源负极 (-)
- 5、白色线--传感器信号(RS-)

Connection :

- 1、Red --+9-32VDC
- 2、Black-- Signal Input(RS+)
- 3、Orange--Blacklight(+9-32VDC)
- 4、Blue--Ground (-)
- 5、White-- Signal Input(RS-)

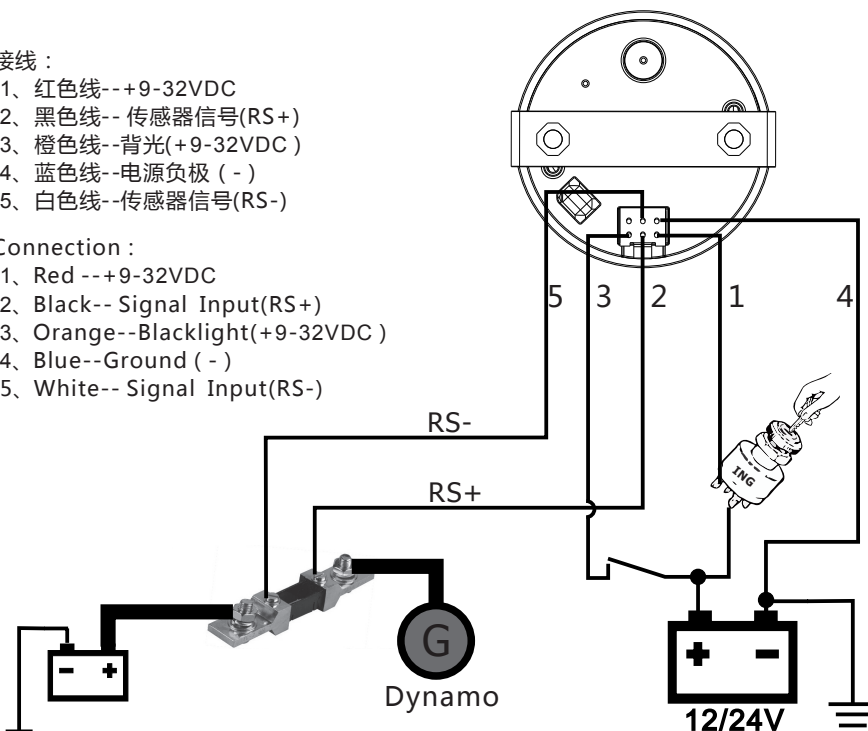

E

参考E图连接电线

Pic E(Wires Connecting)

如果电流方向与仪表显示方向相反, 请将RS+和RS-调换连接
If the direction between the current and the gauges' display is inconsistent, please switch the connection for RS+ and RS-

技术参数:

工作电压: 9~32VDC,
工作电流: <60mA;
工作温度: -30~+75°C
存储温度: -40~+85°C。

Specification :

Operating Voltage : 9~32VDC ,
Operating current : <60mA;
Operating temperature : -30~+75°C
Storage temperature : -40~+85°C。

