



OWNER'S MANUAL

106-30003-01 ECPC

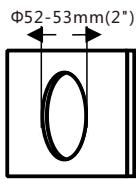


如A图，在准备安装仪表面板上开孔Φ52~53mm，并保证面板后面有至少70mm的空间。


- A** Pic A : Before installation , firstly ,to open a hole (Dia:52~53mm) of the panel, make sure there is a space with (70mm backyard of panel) as well

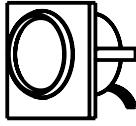

- B** 如B图，将仪表放入开好孔的仪表面板中
PicB: Put the gauge in the hole

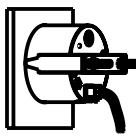

- C** 如C图，用M4螺母和C型固定扣将仪表锁紧在仪表面板上
Pic C: Using M4 nut and C type bracket to seal up the gauge

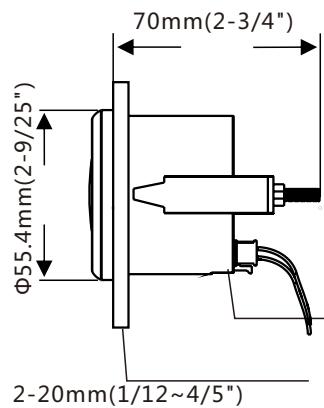


如D图，关于外形尺寸的标注说明
Pic D: Size and annotations

仪表功能说明：

- 1、按轻按Mode按键(小于1秒)一次，改变背光颜色: 背光顺序红色(默认)→绿→蓝→白→黄→ 黄绿→橙→ 紫。
- 2、如果仪表带报警灯默认设置：
油位表、水位表报警位置≤1/8；污水表报警位置≥7/8；水温表报警位置≥96°C；油温表报警位置≥120°C；
压力表报警位置≤0.8bar；12V电压表报警位置≤11.3V；24V电压表报警位置≤22.6V。

Operation:

- 1.Press the Mode button (less than 1 second) to change the backlight color: Backlight changed in sequence: red (default) → green → blue → white → yellow → yellow green → orange → Purple .
- 2.Alarm light(If have):
(1) Level gauges : the alarm light will be lighting if the fuel/water level ≤1/8 and if waste level≥7/8;
(2) Temperature gauges: the alarm light will be lighting if the water temperature ≥96°C and oil temperature ≥120°C;
(3) Oil pressure gauge: The alarm light will be lighting if the oil pressure ≤0.8bar .
(4) Voltmeter: For 12V system, the alarm will be lighting if the voltage ≤11.3V ,But as for 24V ststem, the alarm will be lighting if the voltage ≤22.6V.

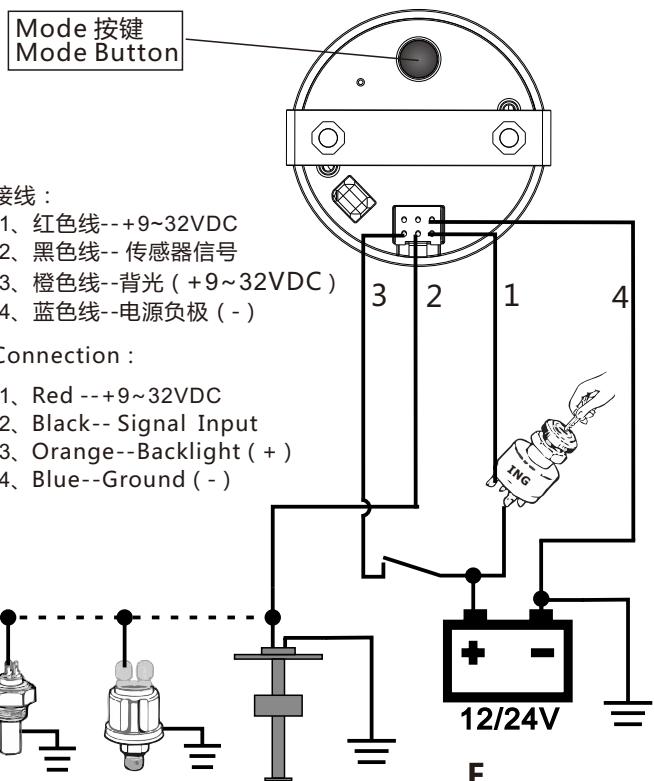

参考E图连接电线，如果是电压表和小时计，则没有黑色电线

Pic E(Wires Connecting) : Generally, pls note the black wires is not included in volt gauge and hourmeter.