


OWNER'S MANUAL

106-00394-01 ECP

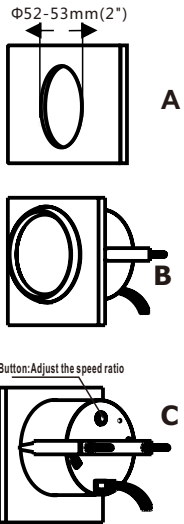

如A图, 在准备安装仪表面板上开孔 $\Phi 52\sim 53\text{mm}$, 并保证面板后面有至少70mm的空间。


Pic A : Before installation , firstly ,to open a hole (Dia:52~53mm) of the panel, make sure there is a space with (70mm backyard of panel) as well

如B图, 将仪表放入开好孔的仪表面板中

Pic B: Put the gauge in the hole

如C图, 用M4螺母和C型固定扣将仪表锁紧在仪表面板上

Pic C: Using M4 nut and C type bracket to seal up the gauge

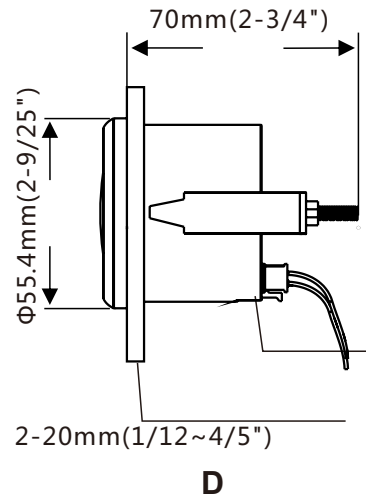

如D图, 关于外形尺寸的标注说明
Pic D: Size and annotations

速比调整:

- 1) 按住仪表黑色橡胶按键3秒, 进入速比设置模式, 如果松开按键3秒, 退出速比设置模式, 并自动保存所设置的数据。
- 2) 进入设置模式后, 按住按键数值一直增加, 松开按键, 再按住按键, 数字一直递减; 速比调整范围: 1-300, 调整到您想要的速比值, 松开按键3秒, 数字自动保存, 1-12速比之间, 步进值0.1, 12-300速比之间, 步进值0.5。
- 3) 如果您的传感器安装在飞轮盘上, 速比值等于发动机齿轮数; 如果转速信号取自W点信号, 速比值等于电极数的一半(Poles/2)

典型速比设置参考:

舷外机	
电极数	速比
4	2
6	3
8	4
10	5
12	6

舷内机或汽油机		
气缸数	冲程	速比
4	4	2
6	4	3
8	4	4
10	4	5
12	4	6

柴油发动机	
飞轮齿数	速比
速比=发动机飞轮齿数	



Speed ratio adjustment:

- 1) Press the black rubber button on the instrument for 3 seconds, then it will enter into the speed ratio setup mode, if the button is released for 3 seconds, it will exit the speed ratio setup mode, and automatically retain the setting data.
- 2) After entering the setup mode, press the button, the value will be increasing, and release the button, then press it again, the number will be decreasing; the adjustment range of speed ratio : 1-300, The stepping value is 0.1 for the range 1-12 and 0.5 for range 12-300. Adjust the ratio value to what you want, then release the button for 3 seconds, the digital automatic will automatically save.
- 3) If your transmitter is installed on the flywheel, the ratio value is equal to the number of the engine gear; if the speed signals come from w point signal, the ratio value is equal to half electrodeplate (Poles/2). If it is the gasoline engine, the speed ratio is equal to the number of cylinders (cylinder/2).

Typical ratio setting reference:

Outboard	
poles	speed ratio
4	2
6	3
8	4
10	5
12	6

Inboard or Gas engine		
cylinder	cycle	speed ratio
4	4	2
6	4	3
8	4	4
10	4	5
12	4	6

Diesel engine	
Gear number	speed ratio
speed ratio=Gear number	




接线:

- 1、红色线--+9-32VDC
- 2、黑色线-- 传感器信号
- 3、橙色线--背光 (+)
- 4、蓝色线--电源负极 (-)

Connection:

- 1、Red --+9-32VDC
- 2、Black-- Signal Input
- 3、Orange--Backlight (+)
- 4、Blue--Ground (-)

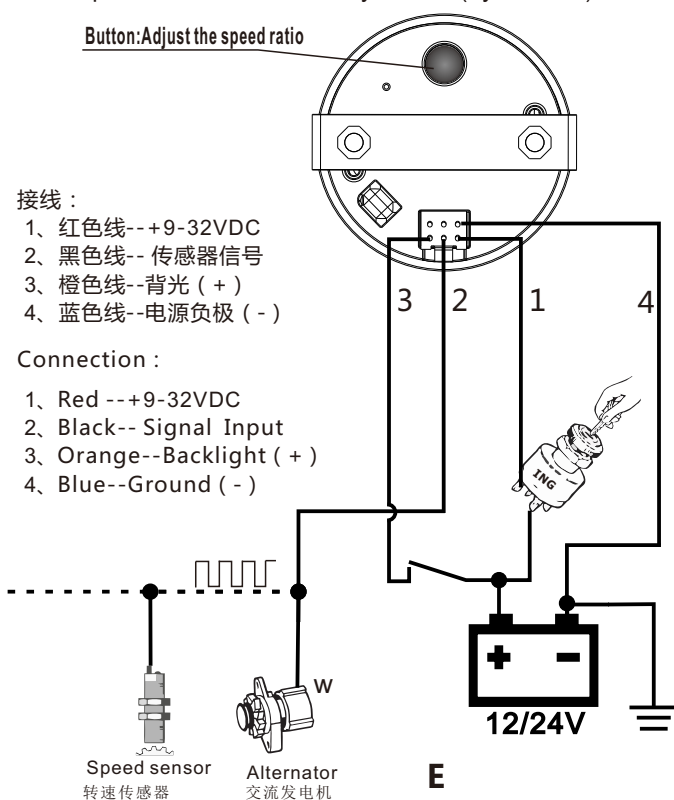

技术参数:

工作电压: 9~32VDC,
工作电流: $\leq 60\text{mA}$;
工作温度: $-30\sim +75^\circ\text{C}$
存储温度: $-40\sim +85^\circ\text{C}$ 。

Specification:

Operating Voltage : 9~32VDC ,
Operating current : $\leq 60\text{mA}$;
Operating temperature : $-30\sim +75^\circ\text{C}$
Storage temperature : $-40\sim +85^\circ\text{C}$ 。