


OWNER'S MANUAL


106-00000-02

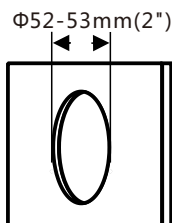

A

如A图，在准备安装仪表面板上开孔Φ52~53mm，并保证面板后面有至少70mm的空间。


Pic A : Before installation , firstly ,to open a hole (Dia:52~53mm) of the panel, make sure there is a space with (70mm backyard of panel) as well

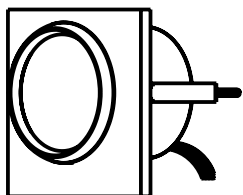

B

如B图，将仪表放入开好孔的仪表面板中


PicB: Put the gauge in the hole

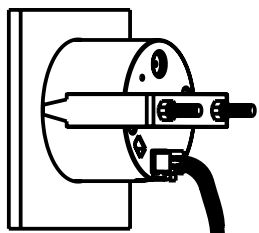

C


如C图，用M4螺母和C型固定扣将仪表锁紧在仪表面板上

Pic C: Using M4 nut and C type bracket to seal up the gauge

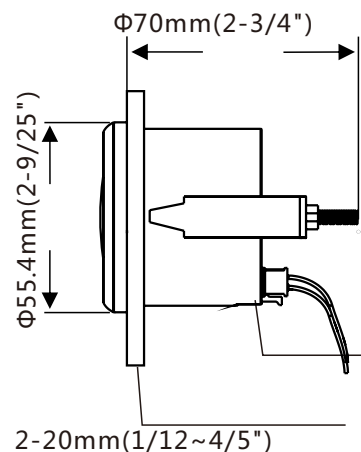

D

如D图，关于外形尺寸的标注说明
Pic D: Size and annotations

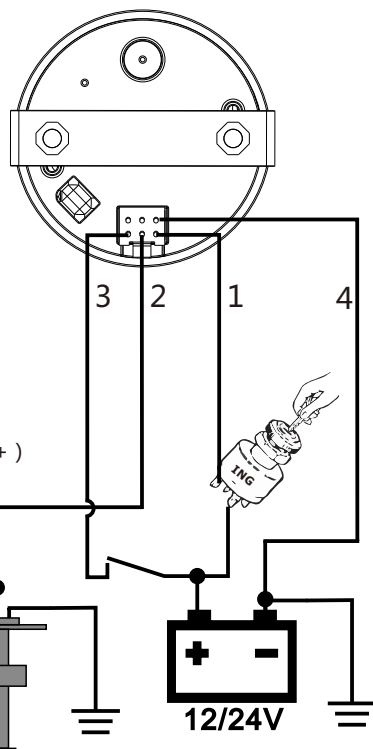

E

接线：

- 1、红色线--+9-32VDC
- 2、黑色线-- 传感器信号
- 3、橙色线--背光 (+)
- 4、蓝色线--电源负极 (-)

Connection :

- 1、Red --+9-32VDC
- 2、Black-- Signal Input
- 3、Orange--Blacklight (+)
- 4、Blue--Ground (-)

技术参数：

工作电压：9~32VDC，
工作电流：≤60mA；
工作温度：-30~+75°C
存储温度：-40~+85°C。

Specification :

Operating Voltage : 9~32VDC ,
Operating current : ≤60mA;
Operating temperature : -30~+75°C
Storage temperature : -40~+85°C。

参考E图连接电线，如果是电压表和小时计，则没有黑色电线

Pic E(Wires Connecting) : Generally,pls note the black wires is not included in volt gauge and hourmeter.