

MLS044 Manual

Press and hold the button first, then unlock the electric door lock. After 5s, enter the back door setting, which is divided into 6 interfaces.

1.1. Interface 1: tire circumference value setting



The 188 second 8-character display of the speed display shows 1, the total cumulative display is C-1860, 1860 means the default tire circumference is 1860mm, thousands of flashes, short press the left button to start changing the current digits, and no movements will flash the hundreds. Cycle to the singles.

The perimeter can be set from 500-2600mm. Long press the left button for 3 seconds to save and enter the magnetic steel number setting interface.

1.2. Interface 2: Number of magnetic steels



188 second 8-character display with speed display 2 and total accumulative display C-04, 04 indicates the number of magnetic steel, 1-12 can be set

Short press left button to modify. Long press the left button for 3s to save and enter the speed setting interface.

1.3. Interface 3: Speed setting interface



The 188 second-digit 8-character display of the speed display shows 3, and the total cumulative display shows C-2.

2 cylinders (166Hz to 10,000 revolutions) 4 cylinders (333Hz to 10,000 revolutions)

Short press the left button to switch between 2 cylinders / 4 cylinders. Press and hold the left button for 3 seconds to save and enter the two-line and three-line fuel setting interface.

1.4. Interface 4: Two-line and three-line fuel settings



The 188 second-digit 8-character display of the speed display shows 4, the total cumulative display is E-2, 2 indicates a two-line (8 / 98 Ω) oil gauge, and 3 indicates a three-line (33 / 566 Ω) oil gauge

Short press left button to switch between 3 lines / 2 lines. Long press the left button for 3s to save and enter the total

clear interface.

	0 block, Oiler flash, E, F, frame flash	1 flash	2flash	3flash	4 flash	5flash	6flash	7flash
2line	96 以上	94—95	81—93	61—80	51—60	31—50	21—30	20 欧以下
3line	566 以上	566—531	530—448	447—345	344—243	242—140	139—40	41 欧以下

1.5. Metric and English settings



The 188 second 8-character display of the speed display shows 5, the lower right corner displays km / h, short press km / h (metric) and mph (imperial) to switch.

Long press 3s to save and enter mileage clear interface. The default value is km / h.

1.6. Interface 6: Cumulative reset



Speed display of 188 second 8 characters display 6, short press the left button to clear, 200km at a time, you can clear three times (enter the back door once)

Long press or power off to exit the back door setting.