



Instruction:

- 一、 Entry setting mode:
 1. Disconnect all power supply
 2. Press setting button
 3. Connect power supply
 4. Entry parameter setting page
- 二、 Number of Signal setting:
 1. Entry number of signal setting mode, number of signal flashing
 2. Short press to switch between 1 to 12 signals
 3. Long press to entry tyre perimeter setting mode
- 三、 Tyre perimeter setting:
 1. Entry tyre perimeter setting mode, matching digit flashing
 2. Short press for highest digit switches between 1~2 and other digits switches between 0~9
 3. 1~3 times long press for entry next digit, fourth long press for entry fuel gauge setting page
- 四、 Fuel setting:
 1. Entry fuel gauge setting mode, matching digit flashing
 2. Short press to switch between 2 and 3, 2 means 2 lines and 3 means 3 lines
 3. Long press to entry number of engine cylinder setting page
- 五、 Number of engine cylinder setting:
 1. Entry number of engine cylinder setting mode, matching digit flashing
 2. Short press to switch between 1, 2 and 4
 3. Exit parameter setting mode, return to normal operation.
- 六、 Automatic exit parameter setting mode:
 1. After entry parameter setting mode, if not button has been pressed in 1 minute, the exit parameter setting mode, return to normal operation.